



Tarkett Laminate Installation instructions Aquastyle Solution




Aquastyle Solution

This product is recommended for use in humid environment such as bathrooms and kitchens, it is not recommended for use in high humidity areas where the floor is usually wet (steam rooms, saunas, shower floor).

Aquastyle solution must be used with an MRTech treated floor (Aquastyle 832, Smart Pro 832, Select 833)

Aquastyle installation, simple steps to prevent water ingress!

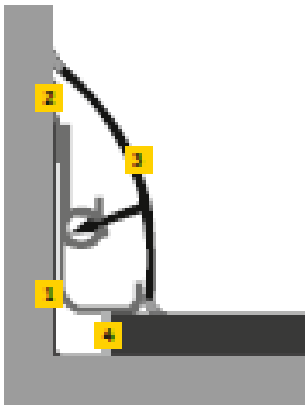

1. Lay Aquastyle damp proof PE foil (200 μ) in overlapping rows (approx. 20cm) over the whole floor surface. At the walls, leave approx. 3-4 cm above the upper surface of the laminate floor. Note: For sound reduction, you can lay Tarkett Soundblockfoam or Tarkettfoam on the Aquastyle PE-foil. It is highly recommended to use the Tarkett underlays.
2. Tape up the overlapping seams and the wall area with the Aquastyle tape.
3. Fit the Aquastyle skirtings along the walls.
4. Install the floor following its specific installation instructions available on our website www.tarkett.com. Seal all cut planks richly with the Aquastyle edge protect using a paint-brush. Wear glasses and gloves.

Product usage

1. Do not wet clean the flooring. Wipe off water/fluids and stains using a well wrung-out mop
2. Stagnation of water/liquids on MRTech treated laminate floor surface should not exceed one hour.

Failure to respect the above conditions voids the guarantee.